

TOSHIBA

OWNER'S MANUAL

R32

INVERTER

ENGLISH



AIR CONDITIONER (SPLIT TYPE)

For general public use

Indoor unit

RAS-05, 07, 10, 13, 16BKVG-E

Outdoor unit

RAS-05, 07, 10, 13, 16BAVG-E



1118350299

PRECAUTIONS FOR SAFETY



Read the precautions in this manual carefully before operating the unit.



This appliance is filled with R32.

- Keep this manual where the operator can easily find it.
- Read the precautions in this manual carefully before operating the unit.
- This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.
- The precautions described herein are classified as DANGER, WARNING and CAUTION. They both contain important information regarding safety. Be sure to observe all precautions without fail.

DANGER

- Do not install, repair, open or remove the cover. It may expose you to dangerous voltages. Ask the dealer or the specialist to do this.
- Turning off the power supply will not prevent potential electric shock.
- The appliance shall be installed in accordance with national wiring regulation.
- Means for disconnection from the supply having a contact separation of at least 3 mm in all poles must be incorporated in the fixed wiring.
- The appliance must be stored in a room without continuously operating ignition sources (for example, open flames, an operating gas appliance or an operating electric heater).
- In order to avoid fire, explosion or injury, do not operate the unit when harmful gases (e.g. flammable or corrosive) are detected near the unit.

WARNING

- Do not expose your body directly to cool or warm air for a long time.
- Do not insert your finger or any article into the air inlet/outlet.
- When an abnormality (burning smell, etc.) occurs, stop the air conditioner and disconnect the power supply or turn off the breaker.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use any refrigerant different from the one specified (R32) for complement or replacement. Otherwise, abnormally high pressure may be generated in the refrigeration cycle, which may result in a failure or explosion of the product or an injury to your body.
- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- Be aware that refrigerants may not contain an odour.
- Do not pierce or burn as the appliance is pressurized. Do not expose the appliance to heat, flames, sparks, or other sources or ignition. Else, it may explode and cause injury or death.
- Appliance and pipe-work shall be installed, operated and stored in a room with a floor area larger than $A_{a,m} \text{ m}^2$.
How to get $A_{a,m} \text{ m}^2$: $A_{a,m} = (M / (2.5 \times 0.22759 \times h_0))^2$
M is the refrigerant charge amount in appliance in kg, h_0 is the installation height of the appliance in m: 0.6 m for floor standing/1.8 m for wall mounted/1.0 m for window mounted/2.2 m for ceiling mounted.

CAUTION

- Do not wash the unit with water. It may cause an electric shock.
- Do not use this air conditioner for other purposes such as preserving food, breeding animal, etc.
- Do not step or put anything on the indoor/outdoor unit. It may cause an injury or damage the unit.
- Do not touch aluminium fin because it may cause an injury.
- Before cleaning the unit, turn off the main switch or the circuit breaker.
- When the unit won't be used for a long time, turn off the main switch or the circuit breaker.
- It is recommended that maintenance be performed by a specialist when the unit has been operated for a long time.
- The manufacturer shall not assume any liability for the damage caused by not observing the description of this manual.

1 INDOOR UNIT DISPLAY



- ① TIMER (White)
② OPERATION (White)

- Display brightness can be adjusted, follow procedure on ⑪.

2 PREPARATION BEFORE USE

Preparing Filters

1. Open the air inlet grille and remove the air filters.
2. Attach the filters. (see detail in the accessory sheet).

Loading Batteries (when use wireless operation.)

1. Remove the slide cover.
2. Insert 2 new batteries (AAA type) following the (+) and (-) positions.

Remote Control Reset

1. Remove the batteries.
2. Press .
3. Insert the batteries.



3 AIRFLOW DIRECTION


1	Press : Move the louver in the desired vertical direction.	
2	Press : Swing the air automatically and press again to stop.	
3	For horizontal direction, adjust manually.	

Note:

- Do not move the louver manually by others.
- The louver may automation positioning by some operation mode.

4 REMOTE CONTROL

- ① Infrared signal emitter
- ② Start/Stop button
- ③ Mode select button (MODE)
- ④ Temperature button (TEMP)
- ⑤ Fan speed button (FAN)
- ⑥ Swing louver button (SWING)
- ⑦ Set louver button (FIX)
- ⑧ Off timer button (OFF)
- ⑨ High power button (Hi-POWER)
- ⑩ Economy button (ECO)
- ⑪ Clear button (CLEAR)
- ⑫ Check button (CHECK)

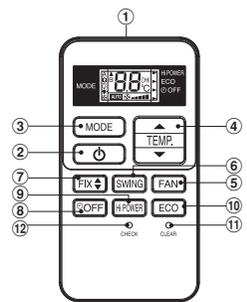

5 AUTOMATIC OPERATION

To automatically select cooling, heating, or fan only operation

1. Press : Select A.
2. Press : Set the desired temperature.
3. Press : Select AUTO, LOW , LOW+ , MED , MED+ , or HIGH .

6 COOLING / HEATING / FAN ONLY OPERATION

1. Press : Select Cool , Heat , or Fan only .
2. Press : Set the desired temperature.
Cooling: Min. 17°C, Heating: Max. 30°C, Fan Only: No temperature indication
3. Press : Select AUTO, LOW , LOW+ , MED , MED+ , or HIGH .

7 DRY OPERATION

For dehumidification, a moderate cooling performance is controlled automatically.

1. Press : Select Dry .
2. Press : Set the desired temperature.

8 Hi-POWER OPERATION

To automatically control room temperature and airflow for faster cooling or heating operation (except in DRY and FAN ONLY mode)

- Press : Start and stop the operation.

9 ECO OPERATION

To automatically control room to save energy (except in DRY and FAN ONLY mode)

Press : Start and stop the operation.

Note: Cooling operation; the set temperature will increase automatically 1 degree/hour for 2 hours (maximum 2 degrees increase). For heating operation the set temperature will decrease.

10 TIMER OPERATION

Set the timer when the air conditioner is operating.

Setting the OFF timer	
1	Press for enter OFF timer setting.
2	Press for select desired OFF timer. (0.5 - 12 hrs)
3	Press for set OFF timer.
4	Press again for cancel OFF timer.

11 DISPLAY LAMP BRIGHTNESS ADJUSTMENT

To decrease the display lamp brightness or turn it off.

- Press and hold for 3 seconds until brightness level (d0, d1, d2 or d3) is shown on remote control LCD then release the button.
- Press Rise or Decrease to adjust brightness in 4 levels.


Remote control LCD	Operation display	Brightness
d3	Lamp illuminates full brightness.	100%
d2	Lamp illuminates 50% brightness.	50%
d1	Lamp illuminates 50% brightness and the operation lamp is turned off.	50%
d0	All lamps are turned off.	All turned off

- In the examples of d1 and d0, the lamp illuminates for 5 seconds before going off.

12 TEMPORARY OPERATION

In case of the misplaced or discharged remote control

- Pressing the RESET button, the unit can start or stop without using the remote control.
- Operation mode is set on AUTOMATIC operation, preset temperature is 24°C and fan operation is automatic speed.

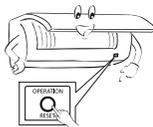

13 AUTO RESTART OPERATION

To automatically restart the air conditioner after the power failure (Power of the unit must be on.)

Setting

- Press and hold the RESET button on the indoor unit for 3 seconds to set the operation. (3 beep sound and OPERATION lamp blink 5 time/sec for 5 seconds)
- Press and hold the RESET button on the indoor unit for 3 seconds to cancel the operation. (3 beep sound but OPERATION lamp does not blink)
 - In case of ON timer or OFF timer are set, AUTO RESTART OPERATION does not activate.

14 SELF CLEANING OPERATION (COOL AND DRY OPERATION ONLY)

To protect bad smell caused by the humidity in the indoor unit.

- If the button is pressed once during "Cool" or "Dry" mode, the fan will continue to run for other 30 minutes, then it will turn off automatically. This will reduce the moisture in the indoor unit.
- To stop the unit immediately, press the more 2 times within 30 seconds.

15 MAINTENANCE

Firstly, turn off the circuit breaker.

Indoor Unit and Remote Control

- Clean the indoor unit and the remote control with a wet cloth when needed.
- No benzene, thinner, polishing powder or chemically-treated duster.

Air filters

Clean every 2 weeks.

- Open the air inlet grille.
- Remove the air filters.
- Vacuum or wash and then dry them.
- Reinstall the air filters and close the air inlet grille.

16 OPERATION AND PERFORMANCE

- Three-minute protection feature: To prevent the unit from being activated for 3 minutes when suddenly restarted or switched to ON.
- Preheating operation: Warm up the unit for 5 minutes before the heating operation starts.
- Warm air control: When the room temperature reaches the set temperature, the fan speed is automatically reduced and the outdoor unit will stop.
- Automatic defrosting: Fans will stop during defrost operation.
- Heating capacity: Heat is absorbed from outdoors and released into the room. When the outdoor temperature is too low, use another recommended heating apparatus in combination with the air conditioner.
- Consideration for accumulated snow: Select the position for outdoor unit where it will not be subjected to snow drifts, accumulation of leaves or other seasonal debris.
- Some minor cracking sound may occur when unit operating. This is normal because the cracking sound may be caused by expansion/contraction of plastic.

Note: Item 2 to 6 for Heating model

Air conditioner operating conditions

Operation	Temp.	
	Outdoor Temperature	Room Temperature
Heating	-15°C ~ 24°C	Less than 28°C
Cooling	-15°C ~ 46°C	21°C ~ 32°C
Dry	-15°C ~ 46°C	17°C ~ 32°C

17 TROUBLESHOOTING (CHECK POINT)

The unit does not operate.

- The power main switch is turned off.
- The circuit breaker is activated to cut off the power supply.
- Stoppage of electric current
- ON timer is set.

Cooling or Heating is abnormally low.

- The filters are blocked with dust.
- The temperature has been set improperly.
- The windows or doors are opened.
- The air inlet or outlet of the outdoor unit is blocked.
- The fan speed is too low.
- The operation mode is FAN or DRY.

18 REMOTE CONTROL A-B SELECTION

To separate using of remote control for each indoor unit in case of 2 air conditioner are installed nearby.


Remote Control B Setup.

- Press RESET button on the indoor unit to turn the air conditioner ON.
- Point the remote control at the indoor unit.
- Push and hold button on the Remote Control by the tip of the pencil. "00" will be shown on the display. (Picture ①)
- Press during pushing . "B" will show on the display and "00" will disappear and the air conditioner will turn OFF. The Remote Control B is memorized. (Picture ②)

Note: 1. Repeat above step to reset Remote Control to be A.

2. Remote Control A has not "A" display.

3. Default setting of Remote Control from factory is A.

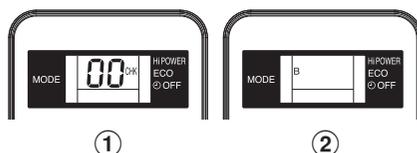

SIKKERHEDSFORBEHOLD



Læs forholdsreglerne i denne manual grundigt inden betjening af enheden.



Dette apparat er fyldt med R32.

- Opbevar denne manual hvor operatøren nemt kan få fat i den.
- Læs forholdsreglerne i denne manual grundigt inden betjening af enheden.
- Dette apparat er beregnet til at skulle bruges af eksperter eller trænede brugere i forretninger, i let industri, landbrug eller ved kommercielt brug af lægmænd.
- Forholdsreglerne er beskrevet heri som FARE, ADVARSEL og PAS PÅ. Disse indeholder vigtig information med hensyn til sikkerhed. Sørg for at være korrekt opmærksom på alle forholdsregler.

FARE

- Undlad at installere, reparere, åbne eller fjerne indkapslingen. Du kan blive udsat for stærk spænding. Bed din forhandler eller en specialist om at gøre dette.
- Slukning af strømforsyningen gør ikke, at du undgår potentielle elektriske stød.
- Apparatet skal installeres i overensstemmelse med de nationale regler for ledningsføring.
- Afbrydere af strømforsyningen skal have en kontaktafstand på mindst 3 mm. Alle poler skal være indbygget i ledningen.
- Apparatet skal opbevares i rum, der ikke indeholder antændelige kilder (fx, åbne flammer, idriftværende gasapparater eller idriftværende elektriske varmeovne).
- For at undgå brand, eksplosion eller tilskadekomst, anvend ikke enheden hvis der er konstateret farlige gasser (fx brændbare eller ætsende) i nærheden af enheden.

ADVARSEL

- Udsæt ikke dig selv for kold eller varm luft i længere tid ad gangen.
 - Stik ikke din finger eller andre objekter ind i luftindsugningen-udgangen.
 - Hvis en anomalitet (lugt af brændt materiale etc.) forekommer, skal du stoppe klimaanlægget og slå strømforsyningen fra eller slukke for afbryderen.
 - Dette apparat er ikke tiltænkt anvendelse af personer (inclusive børn) med reducerede fysiske, sansmæssige eller mentale færdigheder samt manglende erfaring eller kendskab, medmindre de er blevet oplært eller instrueret i anvendelse af en person, som er ansvarlig for deres sikkerhed.
 - Børn bør overvåges, så det sikres, at de ikke leger med apparatet.
 - Brug ikke andre kølemidler end det specificerede (R32) til komplement eller erstatning. Der kan ellers opstå et højt tryk under nedkølingsprocessen, som kan medføre fejl eller at produktet eksploderer og forårsager personskader.
 - Brug ikke andre midler til at fremskynde afrimningsprocessen eller til at rengøre, end dem, der anbefales af producenten.
 - Apparatet skal opbevares i et rum, der ikke indeholder konstant antændte kilder (fx: åbne flammer, antændt gasapparat eller en tændt el-varmer).
 - Vær opmærksom på, at kølemidler muligvis ikke indeholder et lugtstof.
 - Må ikke perforeres eller brændes, da apparatet er under tryk. Udsæt ikke apparatet for varme, flammer, gnister eller andre antændelseskilder. Ellers kan det eksplodere og forårsage personskade eller dødsfald.
 - Apparat og rørføring skal installeres og opbevares i et rum, med et gulvareal der er større end A_{min} m².
- Hvordan Amin m² beregnes: $A_{min} \text{ m}^2 : A_{min} = (M / (2.5 \times 0.22759 \times h))$ ²
M er påfyldt kølemiddel i apparatet i kg, h, er apparatets installationshøjde i m: 0,6 m for gulvplacering/1,8 m for vægmontering/1,0 for vinduesmontering/2,2 for loftmontering.

PAS PÅ!

- Vask ikke enheden med vand. Du kan risikere elektrisk stød.
- Anvend ikke dette klimaanlæg til andre formål såsom konservering af madvarer, opfostring af dyr etc.
- Du må ikke træde eller placere tunge genstande på den indendørs/udendørs enhed. Du kan komme til skade eller beskadige enheden
- Rør ikke aluminiumsribben da den kan forårsage personskade.
- Sluk for enheden eller kredsafbryderen, før du påbegynder rengøring.
- Hvis enheden ikke anvendes i længere tid, skal der slukkes for hovedkontakten eller kredsafbryderen.
- Det anbefales, at vedligeholdelse foretages af en specialist, når enheden er blevet brugt i lang tid.
- Producenten påtager sig ikke noget ansvar for skader som følge af ikke at overholde de i manualen angivne retningsvejledninger.

1 DISPLAY PÅ INDENDØRS ENHED



- ① TIMER/RENGØRING (Hvid)
 ② FUNKTION (Hvid)

- Lysstyrken i displayet kan justeres ved at følge proceduren under ⑪.

2 FORBEREDELSE FØR BRUG

Forberedelse af filtre

1. Åbn for luftindsugningsristen og fjern luftfiltrene.
2. Sæt filtrene fast. (se flere detaljer på tilbehørsarket)

Isætning af batterier (når der bruges trådløs funktion.)

1. Fjern glidelåget.
2. Sæt to nye batterier i (AAA-type) ifølg (+) og (-) markeringerne.

Nulstilling af fjernkontrollen

1. Fjern batteriet.
2. Tryk på .
3. Sæt batteriet i.



3 LUFTSTRØMMENS RETNING


1	Tryk på : Flyt lamelvinduet til den ønskede lodrette retning.	
2	Tryk på : Sving luften automatisk og tryk på knappen igen for at stoppe.	
3	Juster manuelt for vandret retning.	

Bemærk:

- Flyt ikke lamelvinduet manuelt.
- Lamelvinduet kan tænkes at placere sig automatisk med visse funktioner.

4 FJERNKONTROLLENS FUNKTION

- ① Udsender af infrarødt signal
- ② Start/stop-knap
- ③ Valg af modus (MODE)
- ④ Temperaturindstilling (TEMP)
- ⑤ Viftehastighed (FAN)
- ⑥ Knap til vippespænd (SWING)
- ⑦ Slå timer fra (FIX)
- ⑧ Slå timer fra (OFF)
- ⑨ Knap til høj styrke (Hi-POWER)
- ⑩ Økonomiknap (ECO)
- ⑪ Ryd-knap (CLEAR)
- ⑫ Check (CHECK)

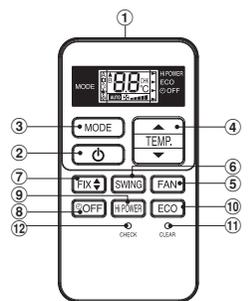

5 AUTOMATISK FUNKTION

Til automatisk valg af afkøling, opvarmning eller kun vifte

1. Tryk på : Vælg A.
2. Tryk på : Indstil den ønskede temperatur.
3. Tryk på : Vælg AUTO, LOW , LOW+ , MED , MED+ , eller HIGH .

6 AFKØLING / OPVARMNING / KUN VIFTEFUNKTION

1. Tryk på : Vælg Cool , Heat , eller Fan only .
2. Tryk på : Indstil den ønskede temperatur.
 Cooling: Min. 17°C, Heating: Max. 30°C, Fan Only:
 Ingen temperaturindikation
3. Tryk på : Vælg AUTO, LOW , LOW+ , MED , MED+ , eller HIGH .

7 TØR DRIFT

For affugtning. Moderat afkøling kontrolleres automatisk.

1. Tryk på : Vælg Dry .
2. Tryk på : Indstil den ønskede temperatur.

8 HI-POWER-FUNKTION

Til automatisk kontrol af rummets temperatur og lufttrykket for hurtigere afkøling og opvarmning (undtagen i TØR og KUN VIFTE-funktion)

- Tryk på : Start og stop funktionen.

Information according to EMC Directive 2004/108/EC	
(Name of the manufacturer)	TOSHIBA CARRIER (THAILAND) CO., LTD.
(Address, city, country)	144/9 MOO 5, BANGKADI INDUSTRIAL PARK, TIVANON ROAD, TAMBOL BANGKADI, AMPHUR MUANG, PATHUMTHANI 12000, THAILAND.
(Name of the Importer/Distributor in EU)	TOSHIBA CARRIER UK LTD.
(Address, city, country)	Porsham Close, Belliver Industrial Estate, PLYMOUTH, Devon, PL6 7DB. United Kingdom

TOSHIBA



1118350299